

Water fog machine instruction manual

Thank you for purchasing our products, please read carefully before using the product use

Manual, and must be strictly in accordance with the requirements for product manual operation. Especially particularly close

Notes on the note "operation". After reading, please be careful collection, for later reference.

1.The product description

Welcome to use our new generation polymer water spray machine, this machine and traditions

Of dry ice machine, smoke machine, as long as a small amount of smoke oil and water can be made

The white smoke, and smoke for a long time to keep close to the ground Rise, large amount of smoke, thick, can be continuously for blowing smoke a few hours

Can completely replace the dry ice machine, higher cost performance.

2.The product principle

Atomized spray into the machines and gasification of smoke oil mixing, through the fan is in the middle of water

Box, water mist after advancing tank, natural cooling, and compound

Water mist weight, so water mist stick, large amount of smoke, can be

continuously

Blowing smoke for a few hours, belching smoke at any time, for a long time continuous work, etc.

Note: outdoor use effects is larger, especially with the wind.

3.The main technical parameters

Model

The output

The net weight

Gross weight

Packing size

The actual work power

The power supply

Fuel tank capacity

Fuel consumption

The control mode

4.Contour map and the part name

5.The key operation function is introduced

Screen panel button operation is introduced:

1. MUNE/function: to set parameters
2. The UP/speed: set parameters, increase the parameter value.

3. The DOWN/deceleration: set parameters, reduce the parameter values.
4. The TIMER/timing: according to the set parameters, cycle with smoke and stop blowing smoke.
5. The LOCK/smoke: press the pump start to work after (smoke), press stop again.
6. FAN/water mist: after pressing the FAN and the atomizer to work (out of the water mist), again

According to the stop.

Note: smoke began to work, if you don't press "FAN/water mist" smoke from the wind

FAN out, press the "FAN/water mist" key work, from the water mist Out of smoke.

Menu Settings: MUNE/features:

1. Addr (1-511) : set the DMX512 address code
2. The Fog (1-100) : oil smoke (smoke size adjustable)
3. The Wind: fan (replacing this feature on the control panel with fan knob)
4. The Interval (1-3600) : set the circular blowing smoke waiting time
5. Duration (1-300) : sets the circular blowing smoke work time
6. The Timer: timing quantitative (start and stop)

Remote control button operation is introduced:

A: press the water mist working, press stop again.

B: press the smoke, then stop.

DMX512 signal control computer operation is introduced:

1. The first channel control continuous spray smoke and stop.
2. The second channel control the size of wind

6.Instructions for

1. Open the tank mouth, to pour into a clean running water, flush water level and water column.

2. The water mist on the transparent pipe inserted into the water tank.
(according to spray oil cans

Customers use free replacement clean plastic)

3. Plug in the power cord, press the "open key" boot, the screen shows "warming" preheat a few

Minutes, appear "ready", said the machine can work. "ready" the number below

Words said heating element temperature.

4. Press "MUNE/menu" key, press the "Fog/smoke oil" (the oil smoke numerical Settings

30% (reference number), press "UP"/" DOWN "key to adjust the numerical size, the customer

Can be adjusted according to the actual effect of the Fog "Fog/smoke oil" number).

5. Press the "LOCK/smoke" key, the spray oil pump began to work.
6. Press "FAN/water mist", water mist sprayer machine and fans began to work.
7. Wind after machine work on the control panel to the size of the fan adjustment knob.
8. "MUNE/menu" key, in the "Wind/fan" function has been replaced to control surface

Fan knob on the plate adjustment, here is useless.

9. After the use, with a mineral water bottles, fresh water is put inside, put the suction tubing into mine

Spring water bottle inside, inside the "MUNE/menu" tuning "Fog/smoke oil" value is set to

100% and then blowing smoke normal work for 5 minutes, go suction and the inside of the tubing water mist

Oil clean. Row after the first press "FAN/water mist", then press "LOCK/smoke"

Stop working to shut off the power.

After 10. Use a drain valve under the machine, please put the water clean after use.

Note: be sure to wash after using oil machine and put the remaining water inside,

See this page 9-10 a.m., so as to ensure the machine used for a long

time)

7.Operation and maintenance

1. Please confirm that no liquid and before starting the internal metal foreign body into the machine,

2. The machine use time box water master, after 1 hour, please check the water tank, add water

(some impurity water can bring damage to water mist machine), the machine USES water will be 1 hour

Heat, then add water or ice to former inlet, smoke the effect will be better.

3. Chassis much water, water mist is blocked out, will be from fan, cause Fan reversal. At this time to open the valve at the bottom of the box out just the right amount of water.

4. Water tank water shortages, looked down from a fan, atomizer green light. The normal work

When the atomizer is bright red. Atomizer water shortage will automatically power-off protection.

5. Smoke oil value not less than 10%, otherwise the oil pump does not work, can't oiling.

6. The smoke oil fan numerical don't adjust too big, or smoke will be gone with the wind.

7. If spray oil leak into the water tank, please scrub clean.

8. Spray oil is a mixture of imported raw materials and water, colorless, tasteless, non-toxic, feeling too

Strong, please add some water to dilute, proportion may effect appropriate adjustments according to the customer request.

9. The machine must be clean with clear water after use oil, or it will cause the heating element

Can't plug, oil.

10. Spray machine in the process of working with a small amount of smoke from the fan overflow is a normal phenomenon.

11. The machine itself relay happens di da di da, belongs to the normal phenomenon,

There are air tubing, oil pump makes a noise and oil smoke went up, there is no sound.

12. Spray machine must use the special oil spray, use other oil smoke machine is produced

Jams, do not add other sundry except oil smoke.

13. Don't remove the filter in front of the tubing, or impurities in oil pump easily

, lead to block machine.

14. Before moving transport, to ensure the oil smoke don't leak out of the barrel.

15. Water spray machine must be clean, water quality determines the

working life of the atomizer.

16. Customers can choose according to need, DMX512 control computer operation, remote control operation

, panel manual operation (recommended), three functions.

17. Numerical smoke oil Fog, the larger the value, the more fuel, smoke the more thick, but water

The fog will be gone with the wind. The faster fan numerical value, the greater the water spray out, the more powerful floating,

Please according to your need to debug a suitable numerical scene.

8. Other Settings

1. Automatic spraying smoke volume Settings: in "Ready To Fog" state, press

"Fog" automatic spraying 100% smoke volume at this time, and then press "UP" or

"DOWN" button, can be set up from 1% - 1% smoke

2. The interval with smoke waiting time Settings: in the "Ready To Fog" state

"Mune" button next to "Interval Set 1 s" page, and then press the UP

Or DOWN keys to select) (1-3600 seconds

3. Duration with smoke Settings: in the "Ready To Fog" state MUNE

"Duration Set 1 s" button next to the page, and then press the UP or

DOWN

Key to select (1 second - 300 seconds).

4. Timing quantitative belching smoke Settings: the spray smoke, smoke injection time intervals, continuous spray

Smoke after the TIMER has been set, and then press the "TIMER", the first continuous spray operation

The state of smoke again pour meter time interval.

5. DMX512 signal code sets: in Ready To press MUNE Fog state

Button next to "DMX512 # 000" page, and then press the UP or DOWN key

Select the address code.

9.Warranty policy

The company atomization slice of life 3000 hours, specific see customers to use the quality of the water

Quantity, water is pure, the longer life of atomizer. Product quality assurance period for a year, one year for free

Repair and replacement parts.

Atomizer: atomizer belongs to consumable, not warranty scope, to life, the customer can be

To replace the atomization can change 3 rmb a piece, 3000 w spray machine 20 heads, as a whole

Replacement costs 60 rmb. 4000 w spray machine 30 heads, overall replacement cost of 90 rmb,

Customers can contact manufacturer according to the operating instructions change, change the simple.

Heating element: heating element belongs to consumable is beyond the scope of warranty.

10.Warranty conditions

Use the product under normal condition within the warranty period of fault, but according to

The content of the terms of this warranty, contact the manufacturer warranty.

During the warranty period, the following will implement the paid service:

- 1) customers in the process of transportation, move; the damage of failure,
- 2) customers to use other oil smoke oil blockage caused by the damage of oil pump;
- 3) the non-artificial damage
- 4) do not according to the manual operation maintenance machine damage;