

DMX Confetti Machine Manual



Please read this manual carefully before using this machine.



I. Note

=

1. When using this machine, you must ensure that the machine and the cylinder are connected in place.
2. Can put 30-40 kg of paper in the machine, effect must better when you put more.
3. If the machine is damaged, and do not disassemble the machine and contact with your supplier to repair the machine.
4. The consumables used in the machine are paper, CO2 or N2, If you want to put something like a piece of petals that are heavier than scraps of paper, please note that the spray height may be reduced a little bit.
5. When using the machine, please check the CO2 whether enough, the bottle must put down and keep flat, the effect will be better.

II. Features

1. Superb design, craftsmanship.
2. Special cast aluminum head, whirlwind effect.
3. DMX design: Console control, easy to operate.

III. Technical Parameters

Weight: 60KG

Size: 73*38*137cm

Control mode: DMX512

Height: 14-16M

IV. Installation

● Installation preparation

Open the packing box, counting the accessories accompanied, read the manual carefully.

The machine supplies a variety of shapes of ordinary scraps of paper or sequins, as well as CO2 / nitrogen.

Please check all parts of the machine are intact before first use.

Carefully check the cylinder, whether in line with national standard cylinders and connect the console.

● Installation

1. The machine placed in the need to place the location, the wheel can be fixed.
2. Fill the bottle with the required carbon CO2 or N2.
3. Connect the machine with the gas bottle via the hose, hose one side connect with tank, the other side connect with the machine.
4. Put down the bottle and keep it flat.
5. Put 30 kg of paper in the machine and adjust the angle.
6. Connect the power signal line and console, remote control confetti machine.

● Dismount

1. Before disassembling, firstly turn off the bottle valve, let out the gas which remain in the pipe, lastly separate the connector of the gas bottle and console.
2. Keep the paper clean and the air box is properly packed.

● MAINTENANCE

Keep the machine in the dry and clean environment.

AFTER SALE SERVICE

The warranty time is one year since the date of purchase, you may get help and solve way through our technical support at any time, and we could offer free parts necessary to repair products.

One of the following conditions not covered under warranty:

1. Because the consumer use, maintenance, transportation, damage caused by improper storage;
2. Non designated personnel to repair the damage caused by the disassembly of products;
3. Because of damage caused by force majeure. Abnormal voltage, such as fire, earthquake, tsunami, debris flow;

● TROUBLESHOOTING

| No. | Problem | Reason | Solution |
|-----|-------------------------|---------------------------------|-------------------------------------|
| 1 | Jet height is not high | Gas shortage | Filled with gas and cushions |
| 2 | The machine not work | Pipes and machines disconnected | connect well the machine and bottle |
| 3 | Console did not respond | The address code is not set up | Set the corresponding address code |